

Sigma Coatings
Amsterdamseweg 14
1422 AA Uithoorn
The Netherlands

Eurofins Product Testing A/S
Smedeskovvej 38
8464 Galten
Denmark

VOC@eurofins.com
www.eurofins.com/VOC-testing


TEST REPORT

Formaldehyde Reduction

31 August 2018

1 Sample Information

Sample name	Johnstone's Trade Air Pure
Batch no.	BP 69
Production date	22/05/2017
Product type	Paint
Sample reception	08/06/2017



Rasmus Stengaard Christensen
Analytical Service Manager, MSc in Chemistry



Nikolaj Røjkær Andersen
Analytical Chemist

Table of contents

1	Sample Information	1
2	Applied Test Methods	3
2.1	General Test References	3
2.2	Specific Laboratory Sampling and Analyses	3
3	Test Parameters, Sample Preparation and Deviations	4
3.1	Chamber Test Parameters	4
3.2	Preparation of the Test Specimen	4
3.3	Picture of Sample	4
3.4	Deviations from Referenced Protocols and Regulations	4
4	Results	5
4.1	Formaldehyde Test Results	5
4.2	Overview of the Formaldehyde Reduction	5
4.3	Formaldehyde Consumption and Sorption Flux	5
5	Appendices	6
5.1	Acronyms Used in the Report	6
5.2	Qualitative Description of VOC Emission Test	7
5.3	Quality Assurance	7
5.4	Accreditation	8
5.5	Uncertainty of the Test Method	8

2 Applied Test Methods

2.1 General Test References

Regulation, protocol or standard	Version	Reporting limit [µg/m ³]	Combined uncertainty ^a [RSD(%)]
ISO 16000-23*	2009	3	22%
ISO 16000-3	2011	3	22%

2.2 Specific Laboratory Sampling and Analyses

Procedure	External Method	Internal S.O.P.	Quantification limit / sampling volume	Analytical principle	Uncertainty ^a [RSD(%)]
Sample preparation	ISO 16000-11:2006	71M549810	-	-	-
Emission chamber testing	ISO 16000-9	71M549811	-	Chamber, air control	-
Formaldehyde injection	ISO 16000-23	71M549813	-	formaldehyde injection	-
Sampling of aldehydes	ISO 16000-3:2011	71M549812	35 L	DNPH	-
Analysis of aldehydes	ISO 16000-3:2011	71M548400	3-6 µg/m ³	HPLC-UV	10%

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entity, parts of it only with a written acceptance by Eurofins.

3 Test Parameters, Sample Preparation and Deviations

3.1 Chamber Test Parameters

Parameter	Value	Parameter	Value
Chamber volume, V[L]	119	Preconditioning period	-
Air Change rate, $n[h^{-1}]$	0.5	Test period	16/06/2017 – 15/07/2017
Relative humidity of supply air, RH [%]	50 ± 5	Area specific ventilation rate, q [m/h or m ³ /m ² /h]	0.36
Temperature of supply air, T [°C]	23 ± 1	Loading factor [m ² /m ³]	1.4
Average formaldehyde injection	100 +/- 20		

3.2 Preparation of the Test Specimen

The sample was homogenised and applied onto a glass plate.

Number of Layers	Application amount per layer, g/m ²	Drying time, h
2	150	24

3.3 Picture of Sample



3.4 Deviations from Referenced Protocols and Regulations

No deviations from the referenced test methods were observed.

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entirety, parts of it only with a written acceptance by Eurofins.

4 Results


4.1 Formaldehyde Test Results

Formaldehyde results with continuous formaldehyde injection. On the 29th day there is no formaldehyde injection.

	1 day [µg/m ³]	3 days [µg/m ³]	7 days [µg/m ³]	14 days [µg/m ³]	21 days [µg/m ³]	28 days [µg/m ³]	29 days [µg/m ³]
Empty chamber	150	130	140	120	120	130	-
Sample	30	36	40	43	38	41	7.1

Table shows the formaldehyde concentration in the chamber with injection for 28 days.

4.2 Overview of the Formaldehyde Reduction

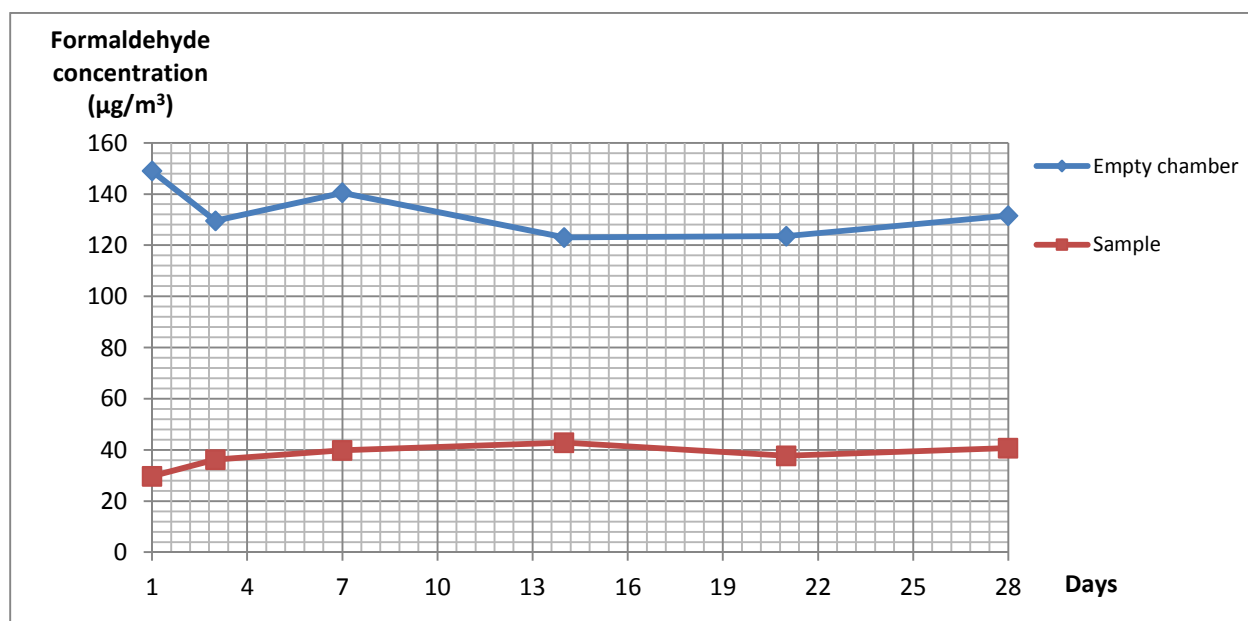

4.3 Formaldehyde Consumption and Sorption Flux

	1 day	3 days	7 days	14 days	21 days	28 days
Consumption [%]	80	72	72	65	70	69
Sorption flux [µg/m ² h]	43	33	36	29	31	33

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entirety, parts of it only with a written acceptance by Eurofins.

5 Appendices

5.1 Acronyms Used in the Report

- < Means less than
- > Means bigger than (Tube/GC-MS overload)
- * Not a part of our accreditation
- ⌘ Um(%) is given as 2x RSD%. Please see section regarding Uncertainty in the Appendices.

5.2 Qualitative Description of VOC Emission Test

5.2.1 Test Chamber

The test chamber is made of stainless steel. The parameters of the artificial atmosphere are checked prior to loading the chamber, and a blank check of the empty chamber is performed.

The chamber operation parameters are as described in the test method section (CEN/TS 16516, ISO 16000-9, internal method no.: 71M549811).

5.2.2 Injection of formaldehyde

An artificial atmosphere containing a known formaldehyde concentration is continuously injected into the test chamber to create the basis of investigating the reductive properties of the tested product.

5.2.3 Expression of the Test Results

All test results are averages of double determinations. An uncertainty of at least $\pm 22\%$ (includes only chamber testing and analyses; does not include injection) should be considered when evaluating these results.

5.2.4 Testing of Aldehydes

The presence of aldehydes is tested by drawing air samples from the test chamber outlet through DNPH-coated silicagel tubes after the specified duration of storage in the ventilated test chamber. Analysis is performed by solvent desorption and subsequently by HPLC and UV-/diode array detection (CEN/TS 16516, ISO 16000-3, VDI 3862 Blatt 3, internal methods no.: 71M549812 / 71M548400).

The absence of formaldehyde and other aldehydes is stated if UV detector response at the specific wavelength is lacking at the specific retention time in the chromatogram. Otherwise it is checked whether the reporting limit is exceeded. In this case the identity is finally checked by comparing full scan sample UV spectra with full scan standard UV spectra.

5.2.5 Calculation of formaldehyde consumption

Formaldehyde consumption in % was calculated with the following formula:

$$FC = (C_{in} - C_{out}) / C_{in}$$

FC = formaldehyde consumption, %

5.2.6 Calculation of formaldehyde sorption flux

Sorption flux was calculated with following formula:

$$F = (C_{in} - C_{out}) Q_c / A$$

F = sorption flux, $\mu\text{g}/\text{m}^2\text{h}$

C_{in} = inlet concentration, $\mu\text{g}/\text{m}^3$

C_{out} = chamber concentration, $\mu\text{g}/\text{m}^3$

Q_c = Air flow of chamber = $0.06 \text{ m}^3/\text{h}$

A = Area of the test specimen

5.3 Quality Assurance

Before loading the test chamber, a blank check of the empty chamber is performed and compliance with background concentrations in accordance with CEN/TS 16516 / ISO 16000-9 is determined.

The results are only valid for the tested sample(s).

This report may only be copied or reprinted in its entirety, parts of it only with a written acceptance by Eurofins.

Air sampling at the chamber outlet and subsequent analysis is performed in duplicate. Relative humidity, temperature and air change rate in the chambers is logged every 5 minutes and checked daily. A double determination is performed on random samples at a regular interval and results are registered in a control chart to ensure the uncertainty and reproducibility of the method.

The stability of the analytical system is checked by a general function test of device and column, and by use of control charts for monitoring the response of individual substances prior to each analytical sequence.

5.4 Accreditation

The testing methods described above are accredited on line with EN ISO/IEC 17025 by DANAK (no. 522). This accreditation is valid worldwide due to mutual approvals of the national accreditation bodies (ILAC/IAF, see also www.eurofins.com/galten.aspx#accreditation).

Not all parameters are covered by this accreditation. The accreditation does not cover parameters marked with an asterisk (*), however analysis of these parameters is conducted at the same level of quality as for the accredited parameters.

5.5 Uncertainty of the Test Method

The relative standard deviation of the overall analysis is 22%. The expanded uncertainty U_m equals 2 x RSD. For further information please visit www.eurofins.dk/uncertainty.